

## SPRAYPAINT INSTRUCTIONS.

## **SAFETY FIRST**

ALLWAYS USE GLOVES, WEAR EYE PROTECTON AND USE RESPIRATION FILTER MASK.

## **SURFACES**

PAINT ONLY ROUGHENED AND CLEANED SURFACES ONLY.

1.
SHAKE WELL
2 MIN. BEFORE USE.




Z.
TEST SPRAY
TO CARDBOARD.



3.

PAINT OBJECT
10 MIN. INTERWALL
BETWEEN 2 LAYERS.

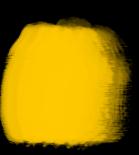

4.
EMPTY NOZZLE
SPRAY UPSIDE DOWN
FEW SEC.



## DRYING TIMES

20°C TEMPERATURE DUST DRY 10 MIN. TOUCH DRY 1 H. TROUGH DRY 48 H. **SPRAYPAINT** 

IS THINNER BASED
INDUSTRIAL PAINT.
ONLY FOR PROFESSIONAL
USE ONLY.